 

 

 

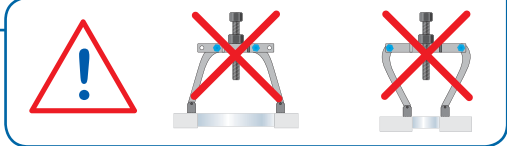
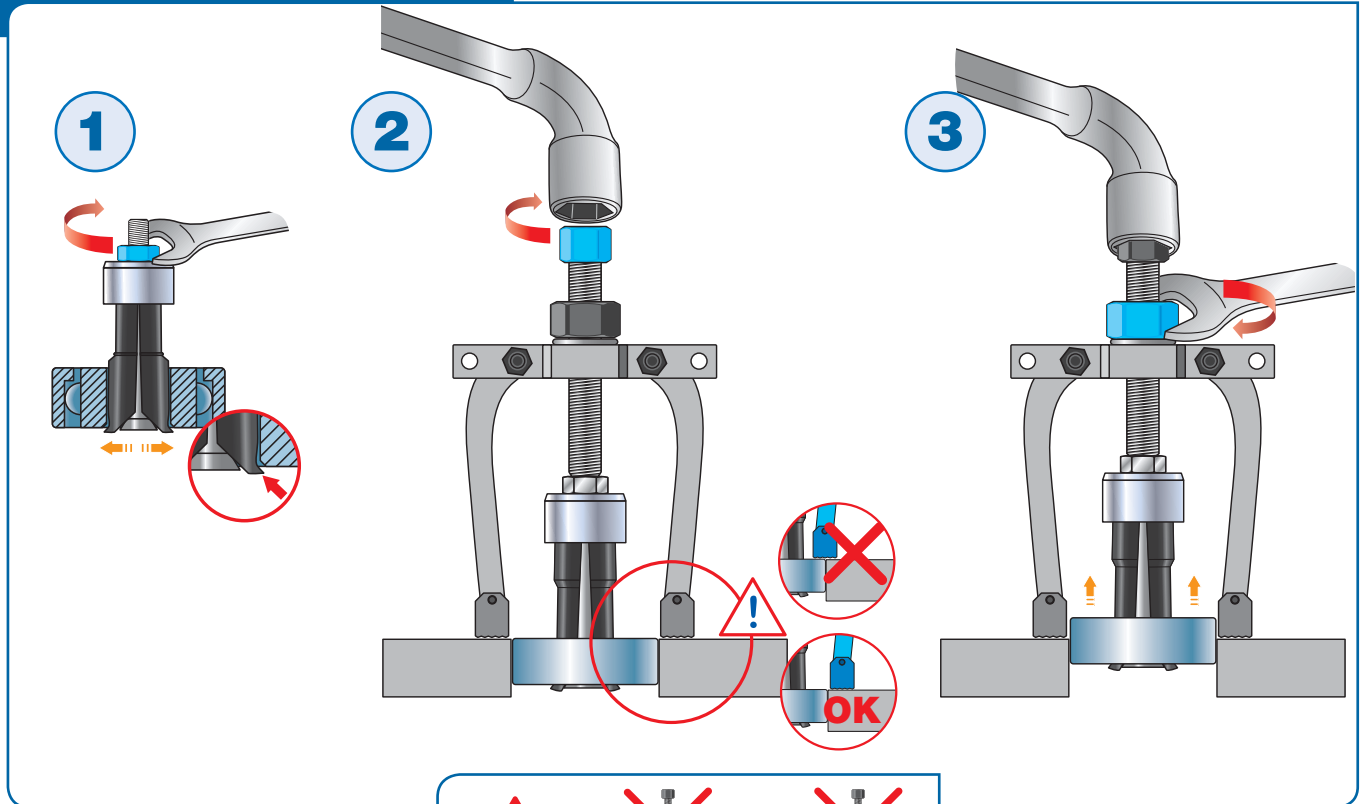
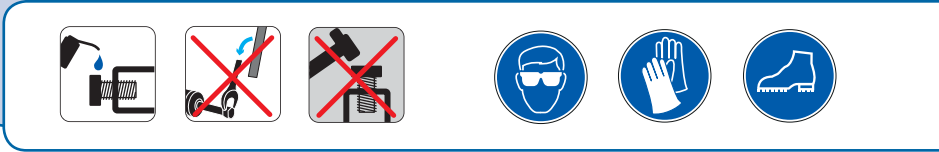


HOW TO USE BP Set?

Extractor	Bearing bore Ø (mm)
BP 45-58 	Min Ø 45  Max Ø 58
BP 57-75 	Min Ø 57  Max Ø 75
BP 74-100 	Min Ø 74  Max Ø 100



SAFETY INSTRUCTIONS



Pulling force max.: 50 kN*
(*Applied to BP 74-100 only)

